


TOYOTA POWER STEERING AND RAM

Hose installation diagram

POWER STEERING FLUID: Howe Power Steering Fluid PN 1105
(GM Mr. Goodwrench® PN: 89020661 may be substituted if needed)

CAUTION:
DO NOT USE ATF (AUTOMATIC TRANSMISSION FLUID)

NOTE: Hose lengths will vary with each installation, custom hoses must be fabricated.
Hose Kit P/N 950 available separately.

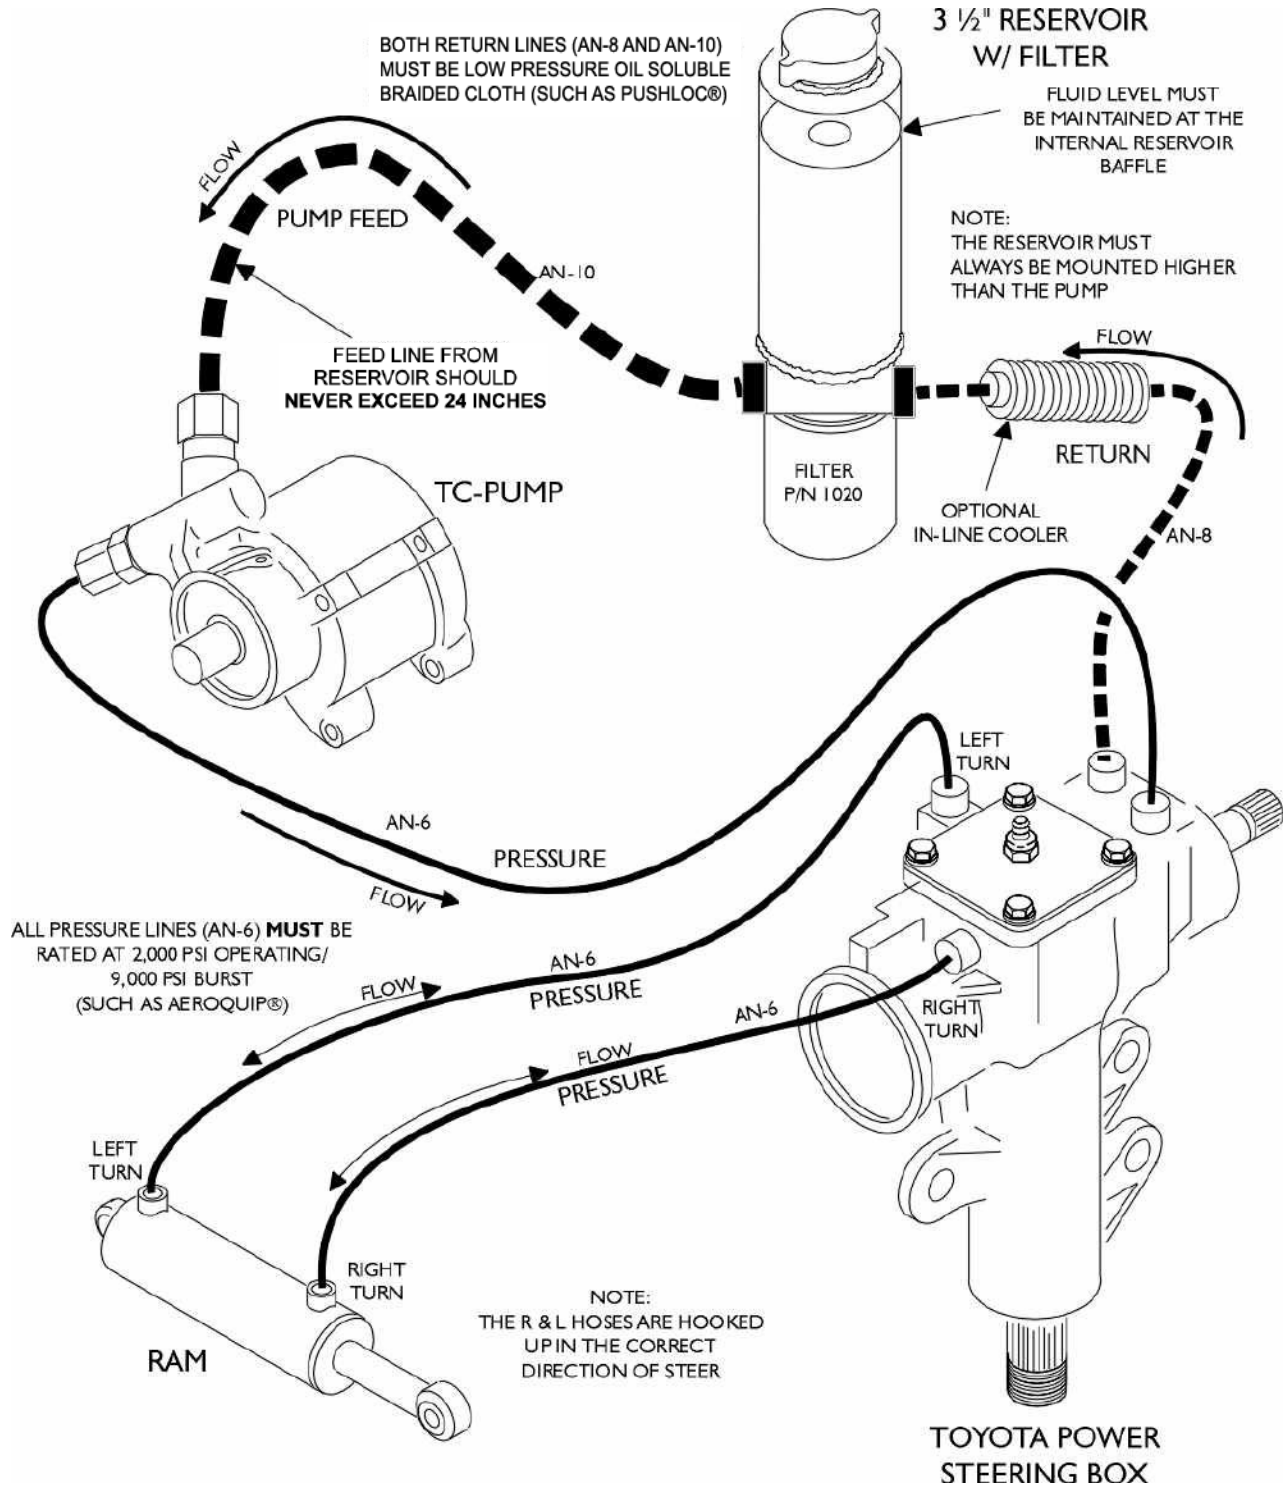

IF YOU HAVE ANY QUESTIONS ABOUT THE INSTALL CALL HOWE PERFORMANCE (619) 561-7764